



Notes:

1. This is a ground-leakage powered sensor. It must be grounded to function.
2. The Residential Occupancy Sensor is for Incandescent Lighting only.

<p>RWSOSDINC</p> <p>1 circuit Wiring Diagram</p>  <p>Building Automation, Inc.</p>
--