


Notes:

1. This is a ground-leakage powered sensor. It must be grounded to function.
2. The Residential Vacancy Sensor is for Incandescent Lighting only.

RWSVSDINC 1 circuit Wiring Diagram
 Building Automation, Inc.