


RWSVSINC120

- Note:
1. This is a ground-leakage powered sensor. It must be grounded to function.
  2. The Residential Vacancy Sensor is **for incandescent Lighting only**.


<b>RWSVSINC 1 circuit</b> <b>Building Automation, Inc.</b>